

# QUICK GUIDE FOR AN ELOZO CLEANING SYSTEM

- ❑ The power is turned on with the **MAIN POWER SWITCH**. When the power is on the switch is lit.
- ❑ The user interface is operated with a knob that is located underneath the screen or by touch screen. By rotating the knob you can choose functions, represented as icons, on the screen. A frame around an icon indicates which selection is chosen. Touch screen functions just by touching desired icon.
- ❑ When you have chosen the desired function you activate it by gently pressing the knob.
- ❑ A cleaning program is started by choosing one of the predefined program options on the upper part of the screen: **"QUICK, NORMAL, POWER, SENSITIVE"**.
- ❑ Alternatively **a user may select the program duration of and the power level for a cleaning program manually (please see more information below)**.
- ❑ If you want to interrupt an active program, **push the knob or touch Stop icon for 4 sec in Info view**.

## PREDEFINED CLEANING PROGRAMS (program time varies depending of product)

QUICK:	Duration 30-45 min, appr. power level 3
NORMAL:	Duration 60 min, appr. power level 3
POWER:	Duration 120 min, appr. power level 3
SENSITIVE:	Duration 30-60 min, appr. power level 1 (sensitive materials)

## MANUAL PROGRAM

- +/- (LEFT): Increases/decreases the length of the program (min. 20-31 min, max. appr. 240 min)
- +/- (RIGHT): Increases/decreases the power of the program (min. 1, max. 6)
- START: Starts the manual program

## OTHER FUNCTIONS

- DRAIN: Activates the emptying phase.

## INDICATORS

- Progr. time indicator Main view:** Displays the manual program time.
- Progr. time indicator: Info view:** Remaining time.
- O3 Gen indicator: Info view:** Ozone is being created when round icon after O3 gen is green.


## ABOUT THE CLEANING PROGRAM:

When the system is creating ozone the round icon beside O3 gen text is green. **Please note that ozone is created in cycles and normally not continuously.** Therefore green indicator cannot be seen on the screen all the time with the power level 6 being an exception. As the program progresses through its cycles, the cleaning system occasionally intakes fresh air from outside the device and simultaneously vents "old" air. The final emptying phase and ozone neutralization starts 15 – 25, depending of product, minutes before the end of the program. When a cleaning program has ended system returns to main view. The Elozo system can now be unloaded and is ready for another program.

An active cleaning program can be interrupted by **pushing the knob or touching Stop icon for 4 sec**. The interruption automatically starts the emptying of the treatment chamber. The emptying phase lasts for 15 to 25 minutes and it cannot be stopped. Even if the power is turned off and back on, the emptying phase will continue automatically. The **"DRAIN"** icon activates the emptying phase, if there is a reason to suspect that the program, including the automatic emptying phase, has not ended normally.



## Info view

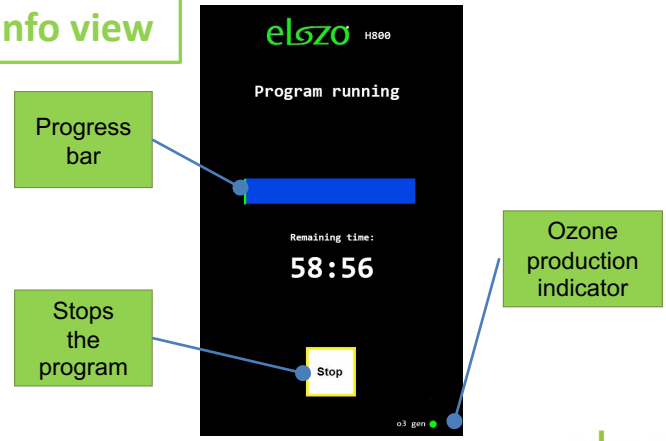

# Schnellanleitung für den Elozo Reinigungsschrank

- ❑ Am **Hauptschalter** wird der Schrank eingeschaltet. Schalter leuchtet wenn eingeschaltet (Version ohne Schlüssel)
- ❑ Das Bedienfeld wird am Knopf unter dem Feld bedient. Durch Drehen wird die Funktion (als Icon) ausgewählt. Die ausgewählte Funktion wird farblich hervorgehoben. **Der Touchscreen funktioniert auch durch einfaches Berühren des gewünschten Symbols.**
- ❑ Wenn die Auswahl stattgefunden hat, wird das Feld durch Drücken des Knopfes aktiviert.
- ❑ Das jeweilige Reinigungsprogramm startet durch Auswahl eines der vier der vorprogrammierten Optionen im oberen Teil des Bildschirms: **"SCHNELL (30), NORMAL(60), POWER (120), SENSITIV(30)"**.
- ❑ Alternativ kann der Anwender die **Programmdauer und die Intensität manuell einstellen (siehe unten).**
- ❑ Wenn Sie das Programm **unterbrechen** wollen, **drücken Sie den Knopf oder "STOP" für 4 Sekunden.**

## Vorprogrammierte Funktionen (Programmdauer hängt vom Modell ab, längere Zeit für 2000'er)

SCHNELL (30):	Dauer ca. 30-45 min, Intensität Stufe ca. 3
NORMAL (60):	Dauer ca. 60 min, cIntensität Stufe ca. 3
POWER (120):	Dauer ca. 120 min, Intensität Stufe ca. 3
SENSITIVE (60):	Dauer ca. 30-60 min, Intensität Stufe ca. 1 (für sensitive Materialien)

## MANUELLES PROGRAMM

+/- (LINKS):	Verringert / erhöht die Programmdauer (min. 35 min, max. ca. 240 min)
+/- (RECHTS):	Verringert / erhöht die Intensität/Stärke (min. 1, max. 6)
START:	Startet das Programm

## ANDERE FUNKTIONEN

**D (DRAIN/ENTLEERUNG):** Startet eine Entleerungsphase (Zusätzliche Luftspülung nach Bedarf).

## ANZEIGEN

**Main View (Hauptanzeige) Programmzeit:** Zeigt die manuell gewählte Programmzeit.

**Info View / Informationsbild Programmzeit:** Verbleibende Zeit.

**O3 Gen indicator: Info view / Infobild:** Ozon wird erzeugt, wenn der Punkt grün ist. (Sichtkontrolle!)

## Über das Reinigungsprogramm:

Wenn Ozon erzeugt wird, ist der runde Punkt neben "O3 gen" grün. **Das erfolgt nur in Intervallen, nicht durchgängig.** Deshalb ist der grüne Indikator nicht permanent (außer bei Intensität 6) zu sehen. Der Reinigungsprozess ist in Zyklen geteilt. Es wird regelmäßig "frische" Luft in den Schrank geführt und "verbrauchte" Luft über den Abluftschlauch nach außen geführt. Die letzte Entleerungsphase startet automatisch ca. 15 - 25 Minuten vor dem Programmende. Wenn das Programm fertig ist, wird wieder der Hauptbildschirm angezeigt. Der Elozo Schrank kann nun für ein neues Programm beladen werden.

**Ein aktives Programm kann durch Drücken des Wahlknopfes oder "STOP" (4Sek.) unterbrochen werden.** Diese Unterbrechung startet automatisch einen Entleerungszyklus. Dieser Entleerungszyklus dauert ca. 15-25 Minuten und kann nicht unterbrochen werden. Bei Spannungsausfall während des Reinigungsprogrammes, wird automatisch, wenn der Strom wieder anliegt, ein Entleerungsprogramm gestartet. Das **"DRAIN"** \_Entleerungsprogramm kann nach belieben immer gestartet werden, falls Bedarf besteht, nach Programmausfall, nach Stromausfall oder dem Wunsch nach einer weiteren Belüftung.

## Hauptansicht

manuelle Einstellung Programmdauer

Programmzeit für manuelle Auswahl

Startet das manuelle Programm


Hauptschalter

Vorbelegte Programme

Manuelle Intensitätsauswahl

Aktiviert Entleerung

Steuerknopf: Auswahl Aktivierung, Start und Stop

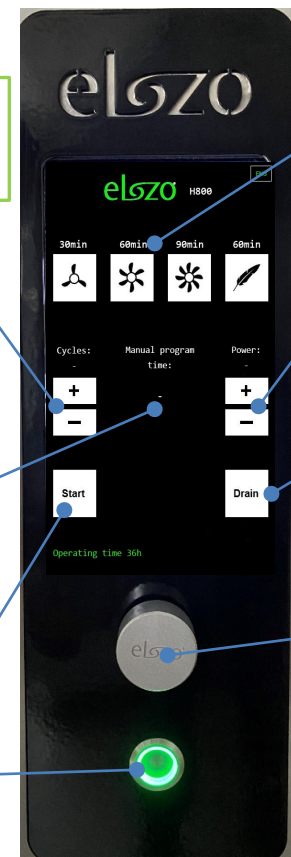

## Infoansicht

Fortschrittsanzeige

Stoppt das Programm

Ozon-erzeugungs-anzeige

